







WIRING

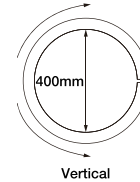

Min. Bending Diameter



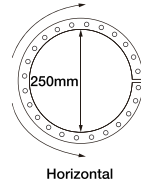


Bending Direction

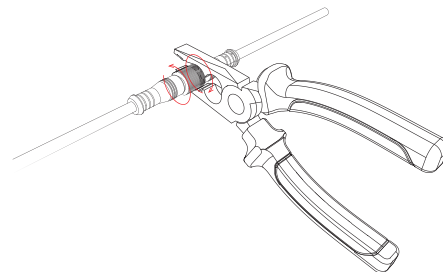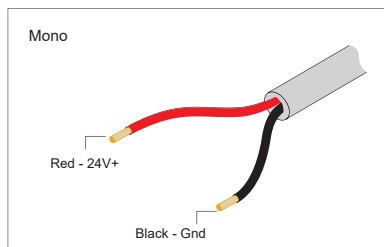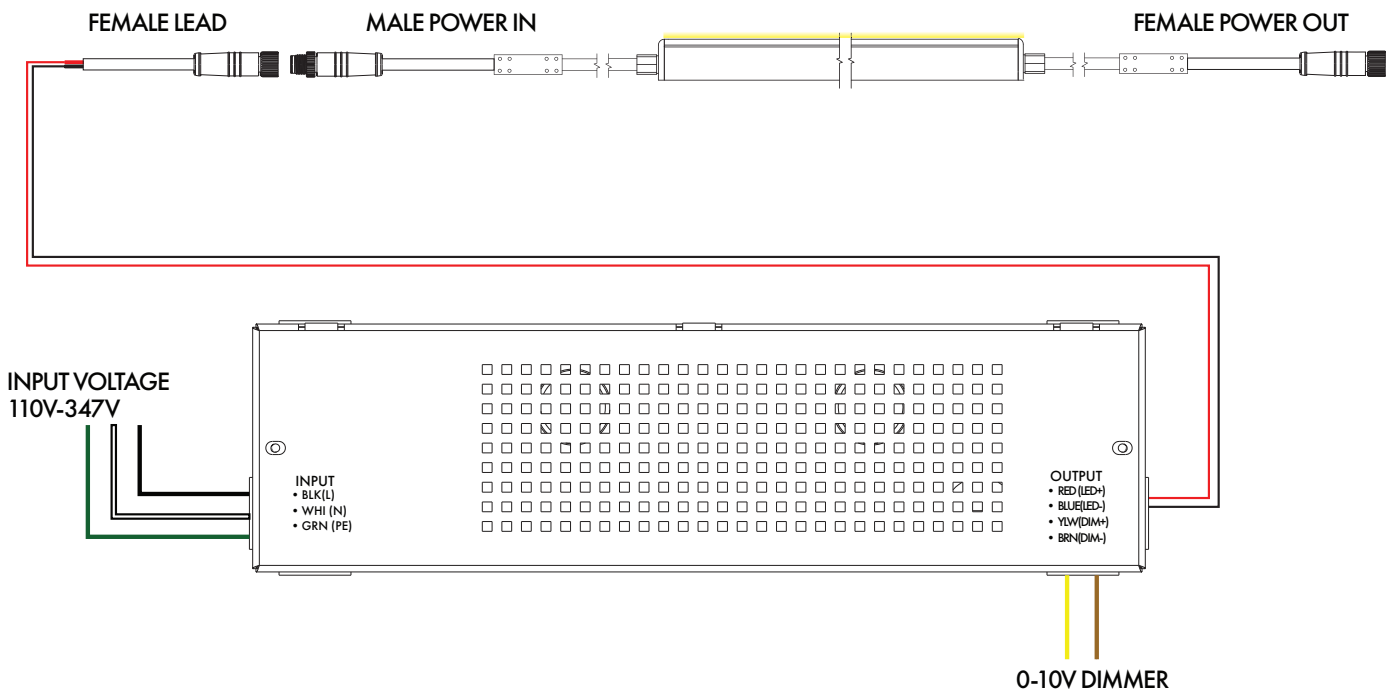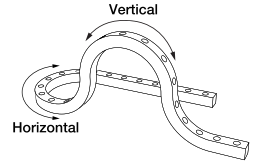

When the male and female connectors are connected, please use pliers tighten them without gap.

HARDWIRE INSTALL

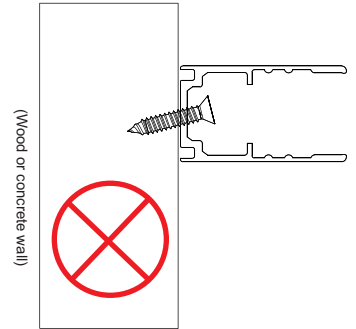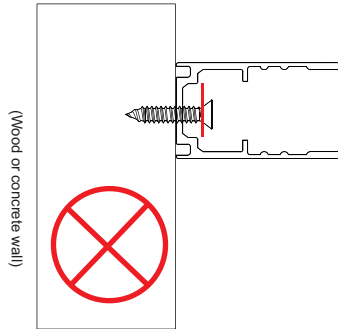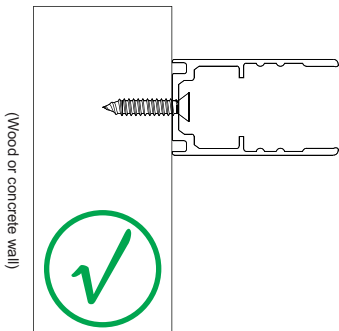

Install the screw into position and ensure the screw head flush or lower the base of aluminum profile.

Screw head above the base of aluminum profile.

