






WIRING

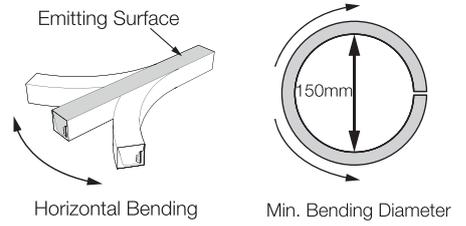

ACE-N-H



ACE-N-V

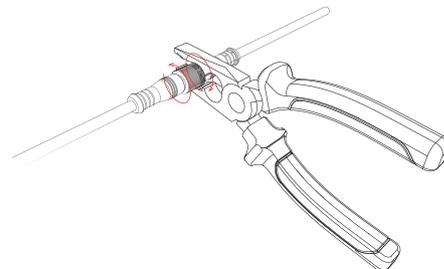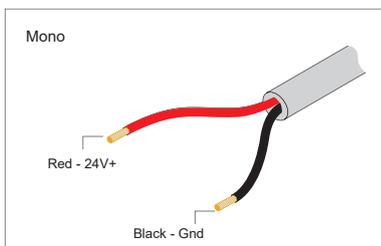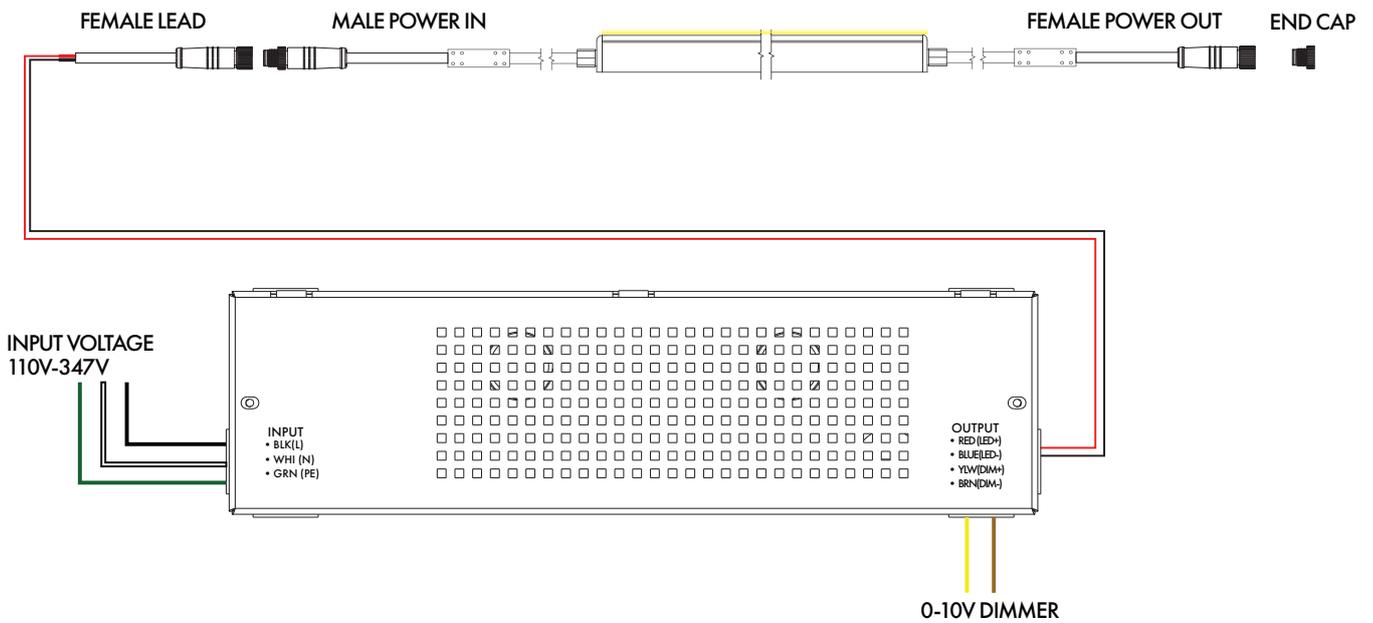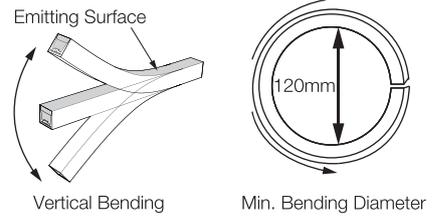

When the male and female connectors are connected, please use pliers tighten them without gap.

HARDWARE INSTALL

