

INSTALL | ACE-N-HR

FOR STATIC WHITE




INSTALLATION INSTRUCTIONS

1. All installations must adhere to relevant electrical code requirements at the local and national levels
2. A licensed professional should preform installation to meet safety standards and electrical code requirements
3. Use only Class 2 DC constant voltage LED driver to comply with UL safety standards
4. Do not install the product underwater.
5. A dedicated driver connection is required for each maximum run.
6. The ACE-N-HR can't be dismantled separately.
7. Do not cut off the neon it will void the warranty.

MAX CONTINOUS RUN

Every 13FT needs to be run back to the driver.

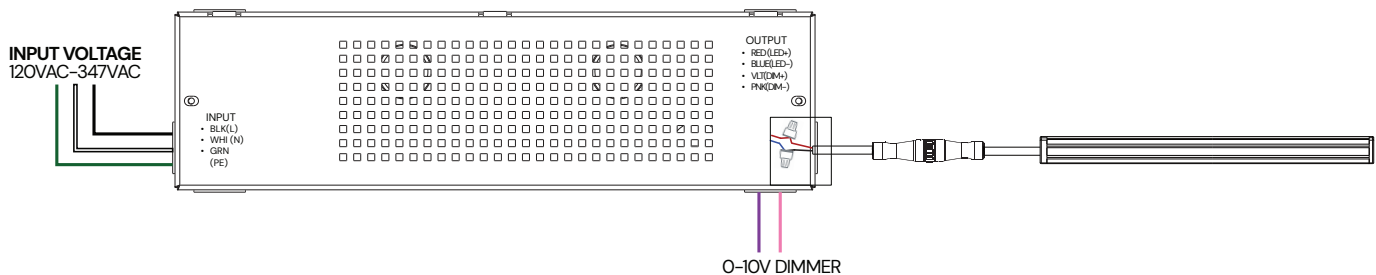

rev 01/26

© 2026 Ace Illuminations. All rights reserved.

Specifications and content subject to change without notice. Protected by international copyright laws.
info@aceilluminations.com | 702.960.4249

cont. on 1



INSTALL | ACE-N-HR




MOUNTING

- Route a slot for the neon according to the dimensions below and take into account a hole for the feed

  
0.27"-0.30"



- Place the neon onto the slot

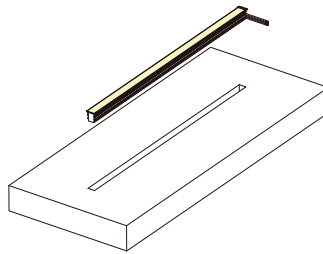

- Make sure the neon sits flush

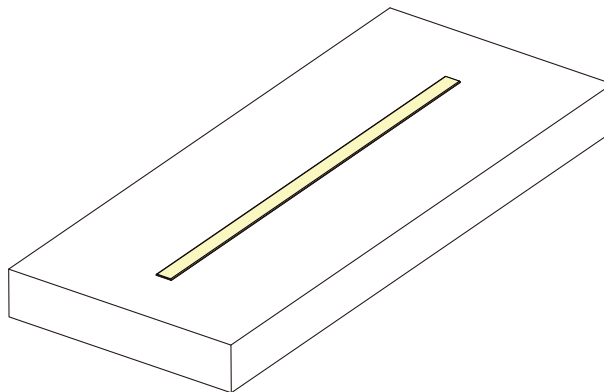

rev 01/26

© 2026 Ace Illuminations. All rights reserved.

Specifications and content subject to change without notice. Protected by international copyright laws.
info@aceilluminations.com | 702.960.4249

cont. on 2