

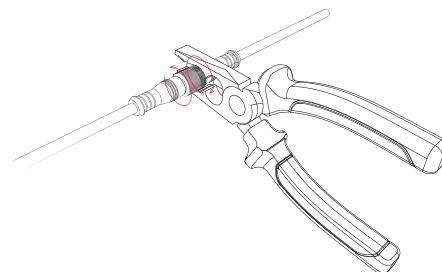
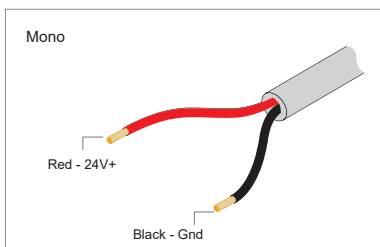
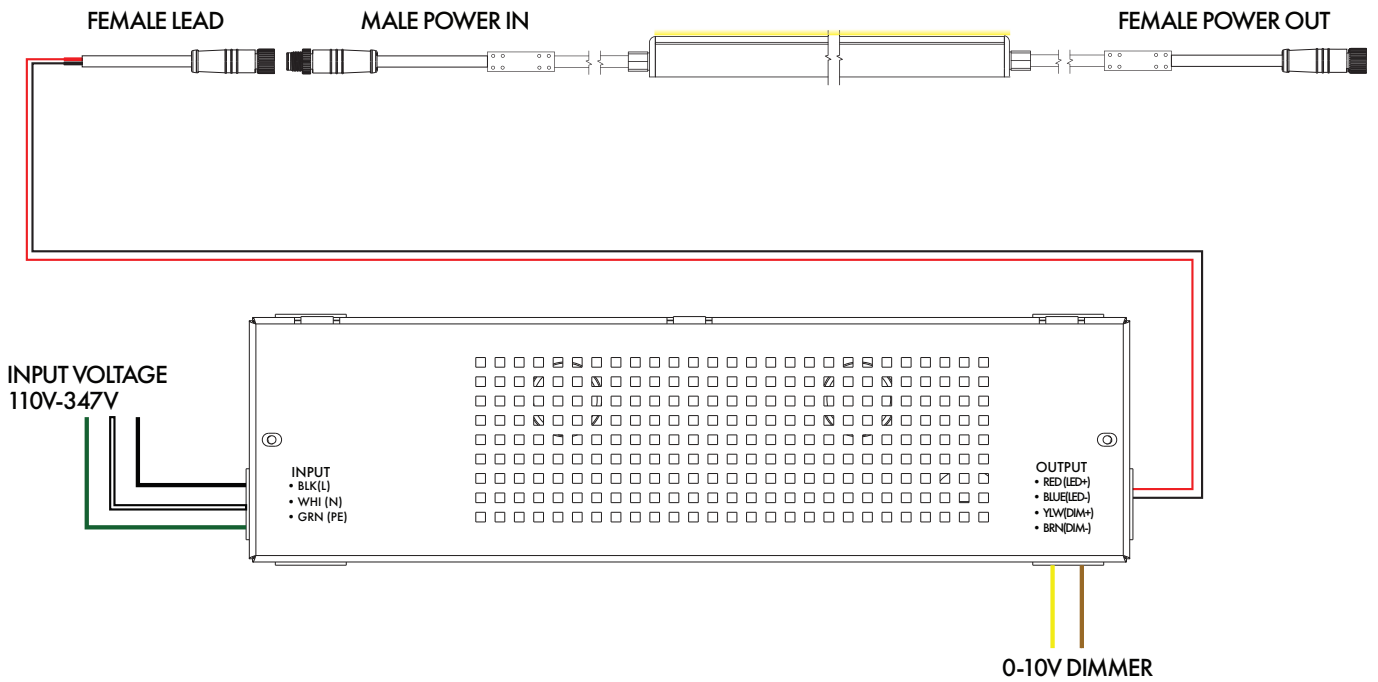


WIRING

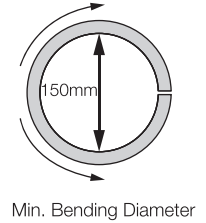

When the male and female connectors are connected, please use pliers to tighten them without gap.

HARDWARE INSTALL

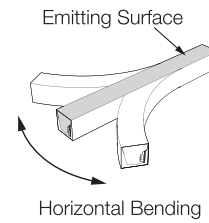