



Clean surface thoroughly from debris.

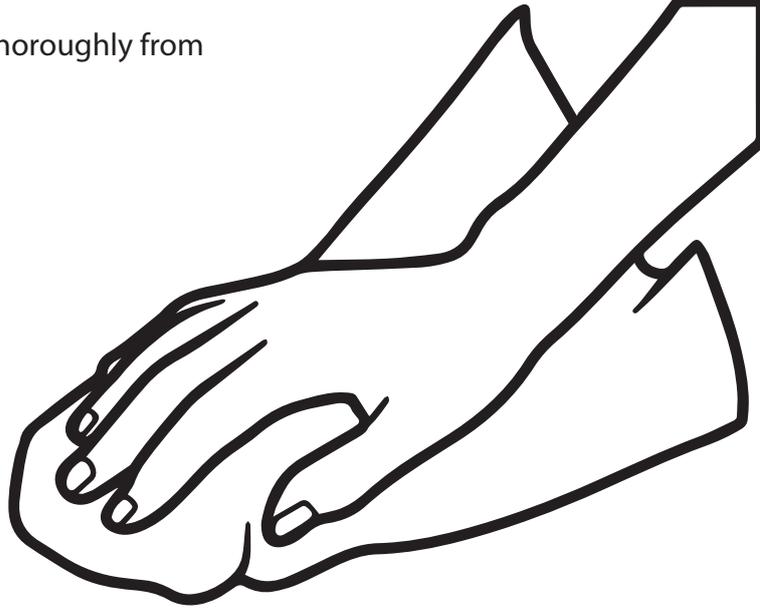

Remove backing from flexible tape. Carefully press the flexible tape to the surface or profile.

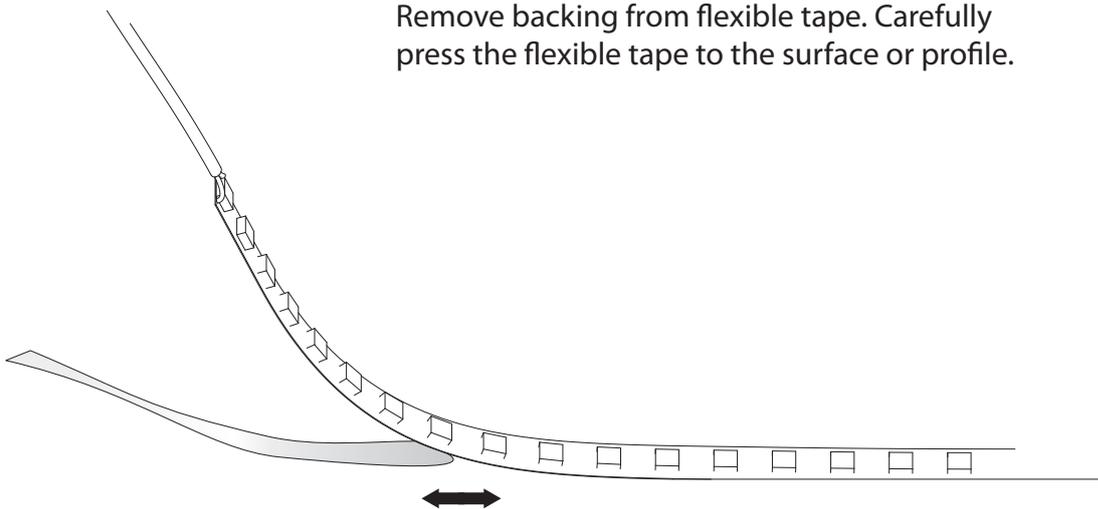

Typical wiring diagram for static white

