


WHITE LIGHT

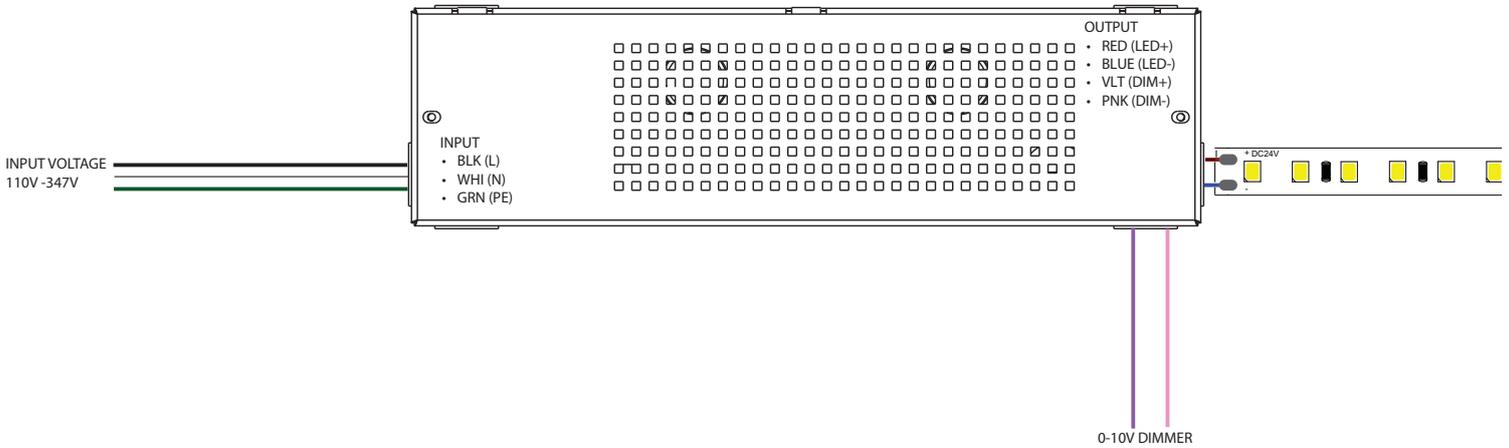

Disconnect line voltage before installing or replacing

Dry or Damp locations only


Make sure to give each driver 3" space from each other when installing multiple drivers to prevent rise of ambient temperature

Mount driver with slots located on the back of the enclosure

For connections use wire rated for at least 194°F

WIRE GAUGE CHART FOR WHITE LIGHT											
WATTAGE		96W	90W	80W	70W	60W	50W	40W	30W	20W	10W
AWG	#22	19FT	20FT	23FT	26FT	30FT	37FT	46FT	61FT	93FT	184FT
	#20	30FT	32FT	36FT	42FT	49FT	59FT	73FT	98FT	148FT	293FT
	#18	48FT	52FT	58FT	67FT	78FT	94FT	117FT	156FT	235FT	465FT
	#16	77FT	83FT	93FT	106FT	124FT	149FT	186FT	249FT	375FT	741FT
	#14	123FT	131FT	148FT	169FT	197FT	237FT	296FT	395FT	596FT	1178FT

RGBW, RGBWCT, AND COLOR TUNING

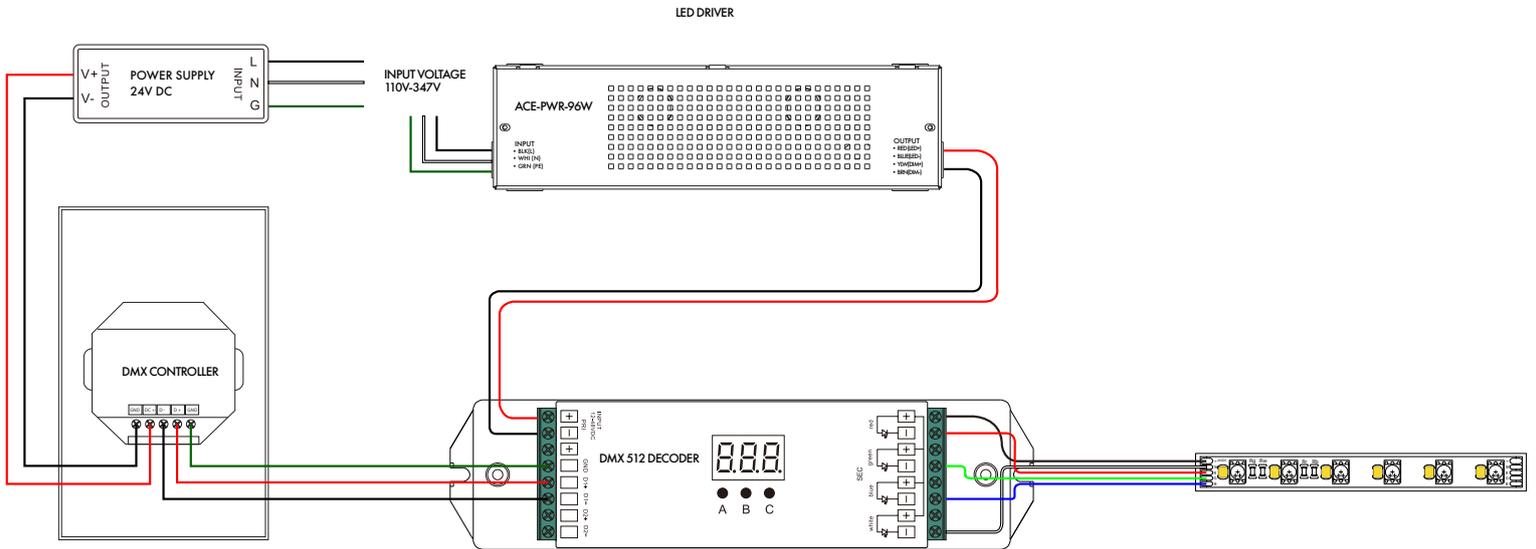

WIRE GAUGE CHART FOR RGBW, RGBWCT, AND COLOR TUNING

WATTAGE		96W	90W	80W	70W	60W	50W	40W	30W	20W	10W
AWG	#22	11FT	12FT	13FT	15FT	18FT	22FT	27FT	37FT	55FT	110FT
	#20	18FT	19FT	22FT	25FT	29FT	35FT	44FT	59FT	88FT	175FT
	#18	29FT	31FT	35FT	40FT	46FT	56FT	70FT	93FT	141FT	279FT
	#16	46FT	49FT	56FT	63FT	74FT	89FT	111FT	149FT	225FT	444FT
	#14	74FT	79FT	89FT	101FT	118FT	142FT	177FT	237FT	357FT	706FT